

Wiring diagram for 15W Lumilife emergency LED driver with Lumilife SKU-HB-100D UFO light - with 0 to 10V external dimming control.

Important note:

The UFO lights are wired to the AC output end of the emergency driver [The end where the clear/plastic test button is located]

Always isolate the AC supply before commencing work - allow the batteries to be fully discharged before commencing any maintenance work.

