

### INTERNAL LOCATION

This product is suitable for Zones 1, 2 & 3 (not Zone 0).

**Zone 1:** the area around the bathtub or shower basin up to a height of 2.25m above the floor and at a radius of 1.2m the water outlet.

**Zone 2:** is limited by the vertical planes external to zone 1 and parallel vertical plane(s) 0.60m external to zone 1.

**Product also suitable for outdoor locations**

### Note

Installation must be installed by a qualified electrician (BS7671).

Read before installation and retain for future reference.

Always check for concealed pipes and cables before installation.

240V-50Hz Incoming supply.


### NOTE

**DO NOT MODIFY** - this will invalidate the warranty and could be dangerous.


Waste electrical products should not be disposed of with household waste.

Please recycle where facilities exist.


Check with your Local Authority or retailer for recycling advice.

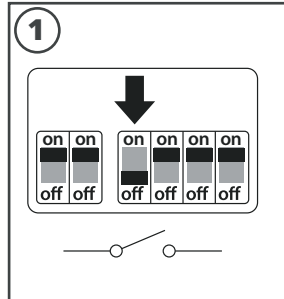


Switch OFF at mains supply before installing

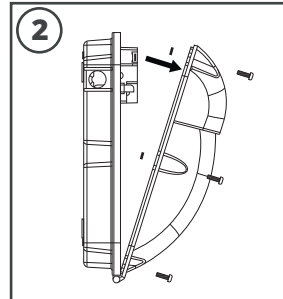


Remove the screws around the sides so that the cover can open on its hinge

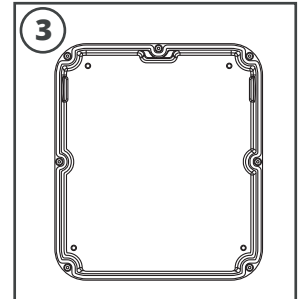


Mark the mounting surface and drill appropriate size holes for the fixings used

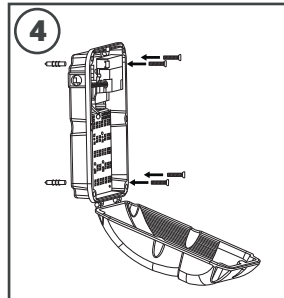


Fix the luminaire to the mounting surface using the fixings supplied

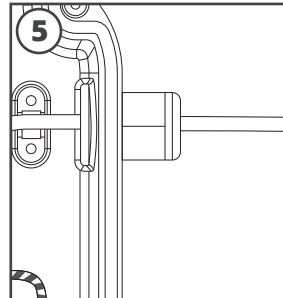


Feed supply cable through gland, ensuring gland is sealed and fixed to maintain IP rating

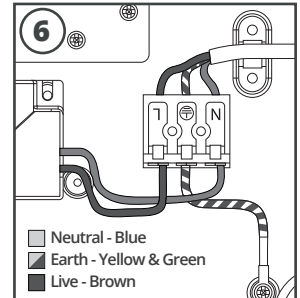


Insert correct supply (as above) into terminal block

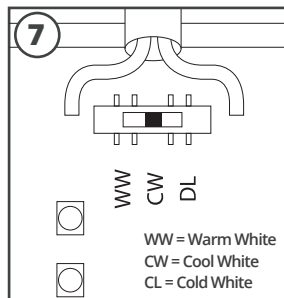

Set required CCT using switch

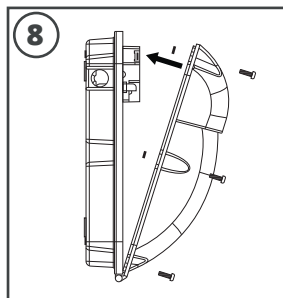

Replace diffuser cover ensuring that the rubber washer is placed over the screw thread

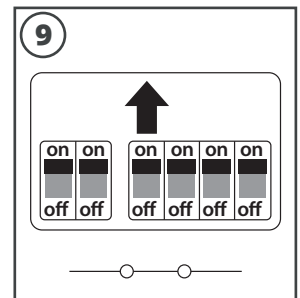

Return power. Switch ON at mains supply