


Wiring diagram for 15W Lumilife emergency LED driver with Lumilife SKU-HB-100D UFO light - Without wall switch or dimmer- for 24Hr lighting - with 12v sensor

Important note:

The UFO lights are wired to the AC output end of the emergency driver [The end where the clear/plastic test button is located]

Always isolate the AC supply before commencing work - allow the batteries to be fully discharged before commencing any maintenance work.

To AC supply

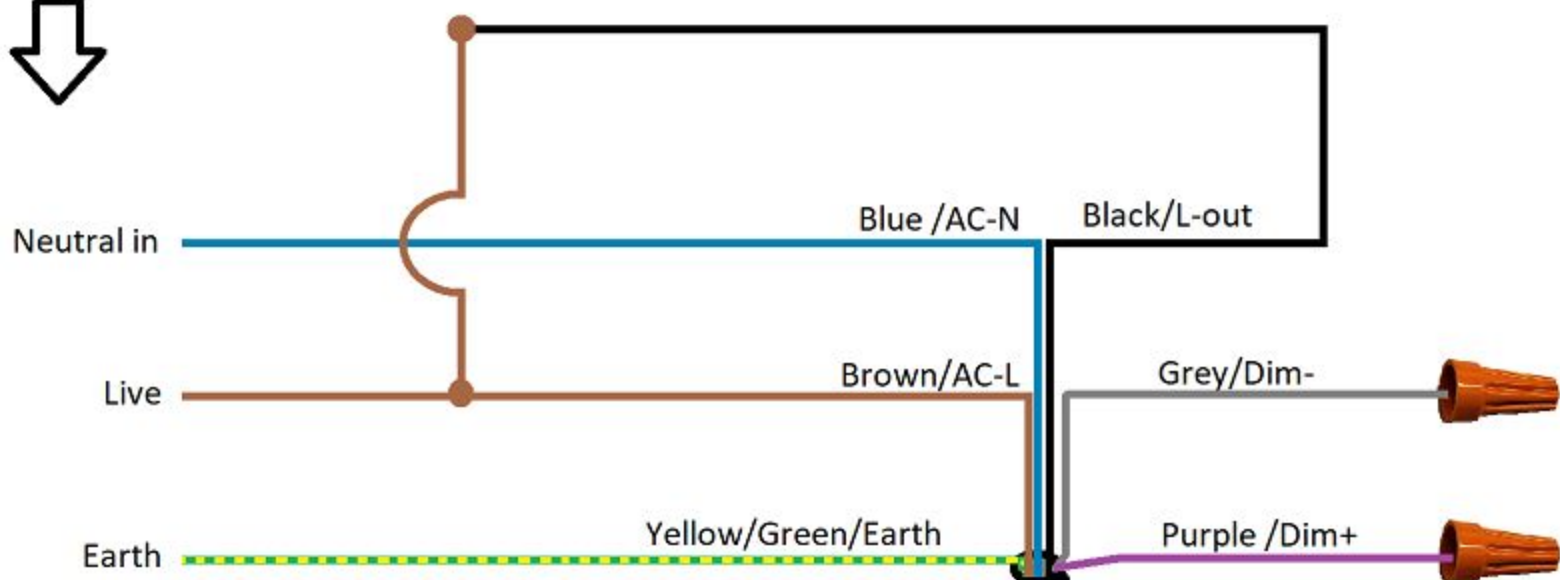

Emergency LED driver →

See important note.

